

XEN+ ROUND TRIMLESS

DOWNLIGHT COMPONENTS AND INSTALLATION.



**DO NOT CONNECT DRIVER TO LUMINAIRE WHEN LIVE!
TURN OFF ELECTRICITY SUPPLY BEFORE CONNECTING.**



1.

OPTIC

RING

CLICK

Optic:
Click the optic into the twist-and-lock ring.

2.

LED ENGINE

OPTIC & RING

TWIST & LOCK

LED Engine:
Twist-and-lock the ring and optic into the LED Engine.

3.

LED ENGINE & OPTIC

DOWNLIGHT CHASSIS

TWIST & LOCK

LED Engine & Chassis:
Twist-and-lock the Chassis onto the LED engine.

4.

CEILING CUT-OUT

TRIMLESS CEILING FIXING

SCREW THROUGH TABS & SKIM UP TO EDGE

Cut-out for Ceiling Fixing:
Check the datasheet for the correct Cut-out hole diameter. Cut the hole and push in the Ceiling Fixing, screwing through the mesh tabs into the plasterboard behind. Skim over the tabs with plaster.



**60 YEARS
IN LIGHT**


CALL: +44 (0) 1235 55 37 69
EMAIL: sales@optelma.co.uk

HEAD OFFICE
The Science Park
Abingdon
Oxfordshire
OX14 3YT


DESIGN OFFICE
Tallis House
2 Tallis Street
London
EC4Y 0AB

PARIS OFFICE
28 Rue Charles
Baudelaire
75012 Paris
France


SWISS OFFICE
St. Urbangasse 53
Postfach 1738
CH-4502 Solothurn
Switzerland

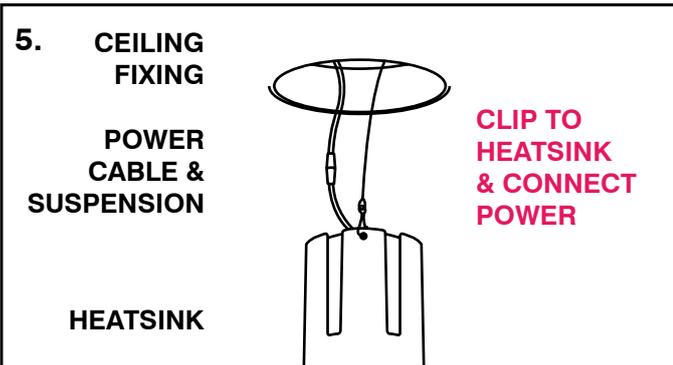


Suspension Wire & Power Cable:
Clip the suspension wire to the top of the Downlight Heatsink. Connect power cable.

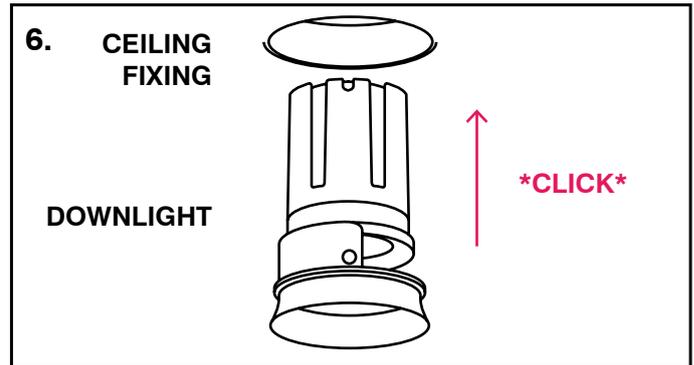

Downlight Chassis & Ceiling Fixing:
Click the LED Engine, Optic & Chassis (Downlight) into the Ceiling Fixing.

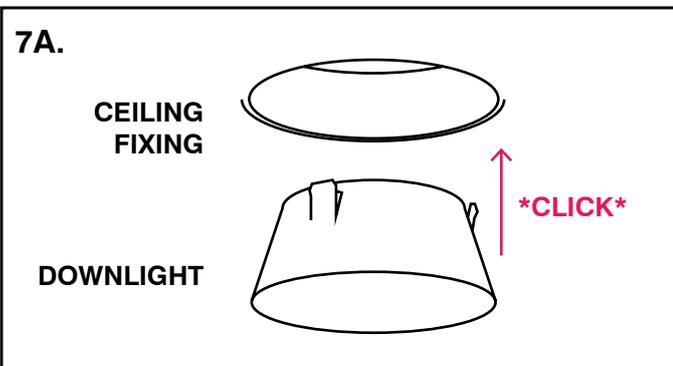

A - Clip-In Fixed Reflector:
Click the Fixed Reflector into place. To remove the reflector, simply reach in and click it out.

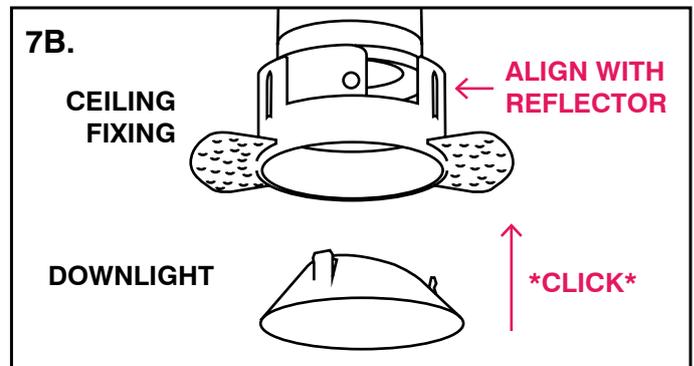

B - Clip-In Adjustable Reflector:
Click the Adjustable Reflector into place, aligned across the axis of adjustment. To remove the reflector, simply reach in and click it out.

