

XEN+ SQUARE

DOWNLIGHT COMPONENTS AND INSTALLATION.



**DO NOT CONNECT DRIVER TO LUMINAIRE WHEN LIVE!
TURN OFF ELECTRICITY SUPPLY BEFORE CONNECTING.**



1.

OPTIC

RING

CLICK

Optic:
Click the optic into the twist-and-lock ring.

2.

LED ENGINE

OPTIC & RING

TWIST & LOCK

LED Engine:
Twist-and-lock the ring and optic into the LED Engine.

3.

LED ENGINE & OPTIC

DOWNLIGHT CHASSIS

TWIST & LOCK

LED Engine & Chassis:
Twist-and-lock the Chassis onto the LED engine.

4.


CEILING CUT-OUT

LOWER WIRE & DEPLOY LEGS


CEILING FIXING

Cut-out for Ceiling Fixing:
Check the datasheet for the correct Cut-out hole dimensions. Cut the hole and push in the Ceiling Fixing, deploying the retaining legs by lowering the wire loop around the ceiling fixing.




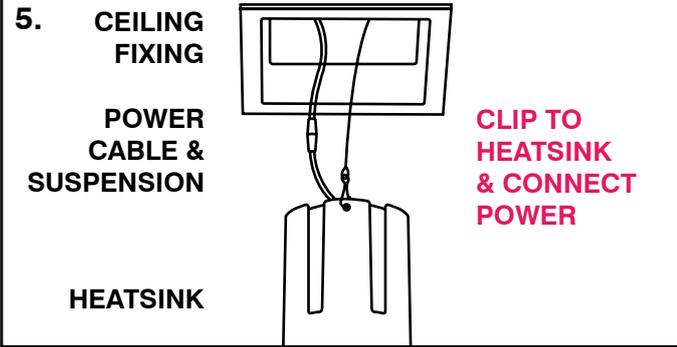


Suspension Wire & Power Cable:
Clip the suspension wire to the top of the Downlight Heatsink. Connect power cable.

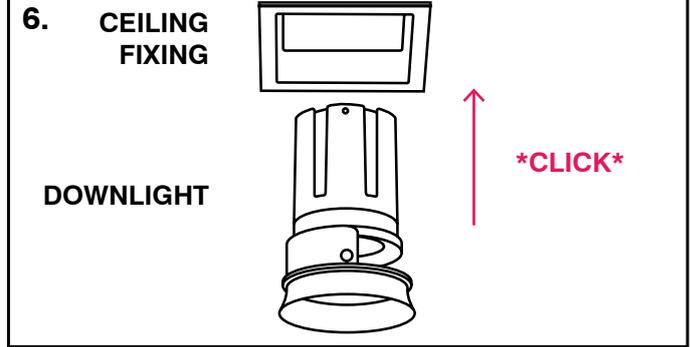

Downlight Chassis & Ceiling Fixing:
Click the LED Engine, Optic & Chassis (Downlight) into the Ceiling Fixing.

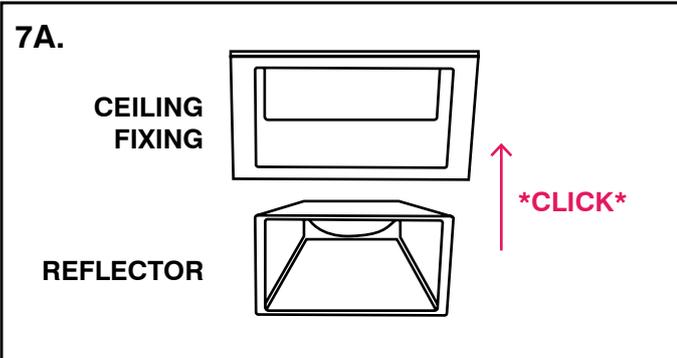

A - Clip-In Fixed Reflector:
Click the Fixed Reflector into place. To remove the reflector, simply reach in and click it out.

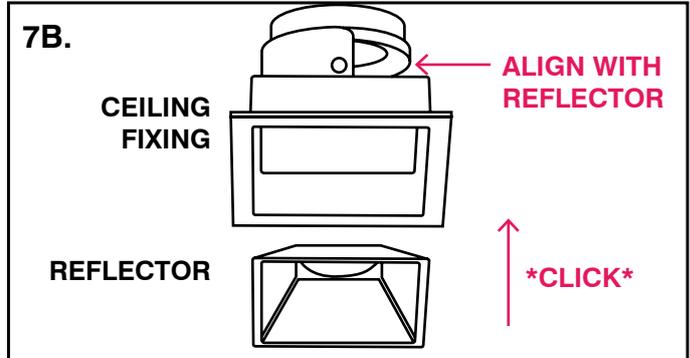

B - Clip-In Adjustable Reflector:
Click the Adjustable Reflector into place, aligned across the axis of adjustment. To remove the reflector, simply reach in and click it out.

