

Cut Out Notes

* L – length of profile mm


FLUTE 40 – cut out 49mm x L* + 3mm

FLUTE 60 - cut out 66mm x L* + 4mm


Diffuser Removal

1

Opal snap-in

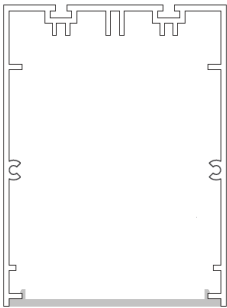


Lift and tilt

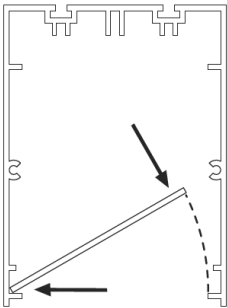

LED Tray Removal

2a


Remove the corresponding LED tray from over the bracket mounting to allow access.

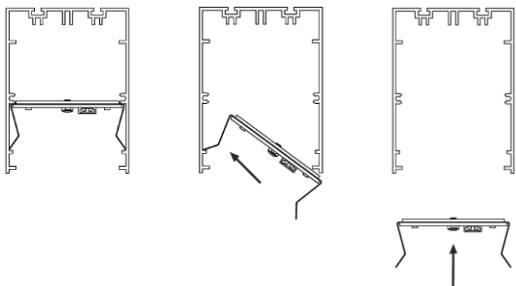

LED Tape Removal

2b


Unclip the FIRO profile from the white plastic mounting clips – *NB # don't hang the profile from the wires.*

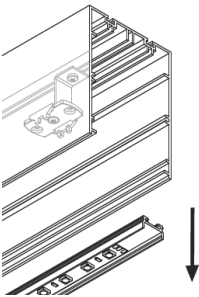

Slotting Profile Into Ceiling Void

3


Ensure fixing bolts are loosely fixed, flatten twist lock brackets to profile sidewall, and slot into void.

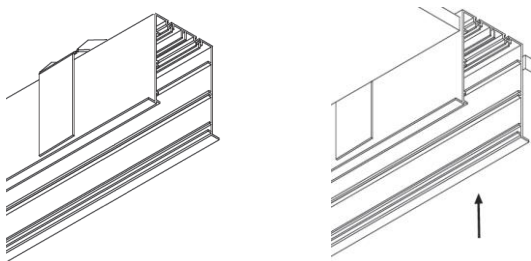

Securing Profile Into Ceiling Void

4

Push the fixing bolts up into the profile and tighten, the bracket will twist within the void.

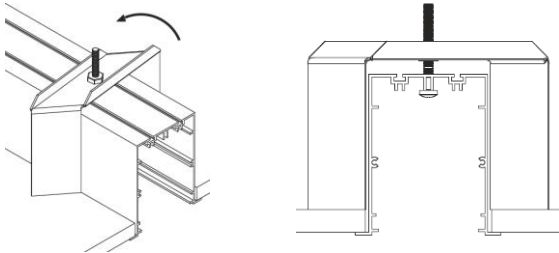

Wiring

5

Ensure all terminations are complete and secure.
Please use document
Optelma Wiring Instructions – REV V


Reassembly of Luminaire

6

Reassembly is the reverse of the previous stages 1 and 2.

Additional Fixings - End Cap

Two countersunk screws hold each endcap to the profile.

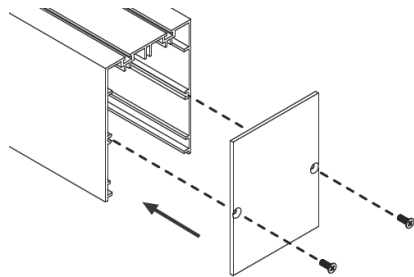

Additional Fixings – Flush Connector

Four screws in each profile to grip the flush connector, do not overtighten.

